

EOS 70D

EOS 70D (W)
EOS 70D (N)

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS 70D (W/N) Instruction Manual.

CPQ-E059-000

© CANON INC. 2013

English

Quick Start Guide

- 1** Insert the battery.
- 2** Insert a card.
- 3** Attach the lens. Align the lens' white or red mount index with the camera's mount index of the same color.
- 4** Set the lens focus mode switch to <AF>.
- 5** Set the power switch to <ON>, then set the Mode Dial to <A+> (Scene Intelligent Auto).

- 6** Flip out the LCD monitor.
- 7** Focus the subject. Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
- 8** Take the picture. Press the shutter button completely to take the picture.
- 9** Review the picture. The captured image will be displayed for 2 sec. on the LCD monitor.

The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.

Number of Possible Shots (Viewfinder Shooting)


Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 1300 shots	Approx. 920 shots

Image Playback

Index, Magnify, Playback, Erase, Select image, INFO. Shooting information

Preparation

Menu Operations

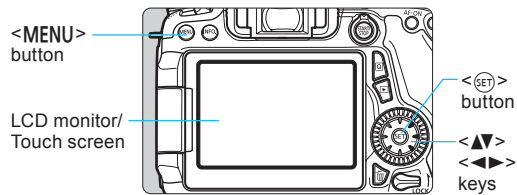

- Press the <MENU> button to display the menu.
- Press the <Left> key to select a tab, then press the <Right> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <Left>.

Basic Zone Modes



Creative Zone Modes

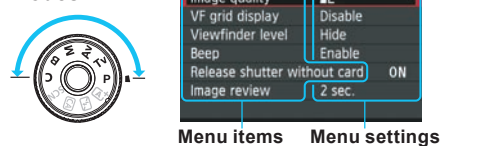


Image-recording Quality

- Select [Q1: Image quality], then press <SET>.
- Turn the <Left> dial or press the <Left> key to select the image-recording quality, then press <SET>.

Image-recording quality, Pixels, Possible shots, RAW: Turn the <Left> dial to select the quality, JPEG: Press the <Left> key to select the quality.

Picture Style ☆

- Select [Q4: Picture Style], then press <SET>.
- Press the <Right> key to select a Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

For <Neutral> (Neutral) and <Faithful> (Faithful), refer to the camera's instruction manual.

Quick Control

Shutter speed, Aperture, Flash exposure compensation, AE lock, High tone priority, ISO speed, Wi-Fi function, Custom Controls, Image-recording quality, Auto Lighting Optimizer, Metering mode, White balance bracketing, Drive mode, White balance, White balance correction, AF area selection mode, AF operation, Exposure compensation/AEB setting, Picture Style, Return, White balance, AF area selection mode, AF operation, Exposure compensation/AEB setting, Picture Style, Return

- Press the <Left> <Right> keys to select a function, then turn the <Left> or <Right> dial to set it.
- In Basic Zone modes, the settable functions differ.

Electronic Level

Press the <INFO> button to display the electronic level.

Touch Screen


- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, see the camera's instruction manual.

Custom Functions ☆


C.Fn I: Exposure	
1 Exposure level increments	7 Select AF area selection mode
2 ISO speed setting increments	8 AF area selection method
3 Bracketing auto cancel	9 Orientation linked AF point
4 Bracketing sequence	10 Manual AF point selection pattern
5 Number of bracketed shots	11 AF point display during focus
6 Safety shift	12 VF display illumination
C.Fn II: Autofocus	13 AF Microadjustment
1 Tracking sensitivity	C.Fn III: Operation/Others
2 Acceleration/deceleration tracking	1 Dial direction during Tv/Av
3 AI Servo 1st image priority	2 Multi function lock
4 AI Servo 2nd image priority	3 Warnings in viewfinder
5 AF-assist beam firing	4 Custom Controls
6 Lens drive when AF impossible	

Shooting Operation


Nomenclature

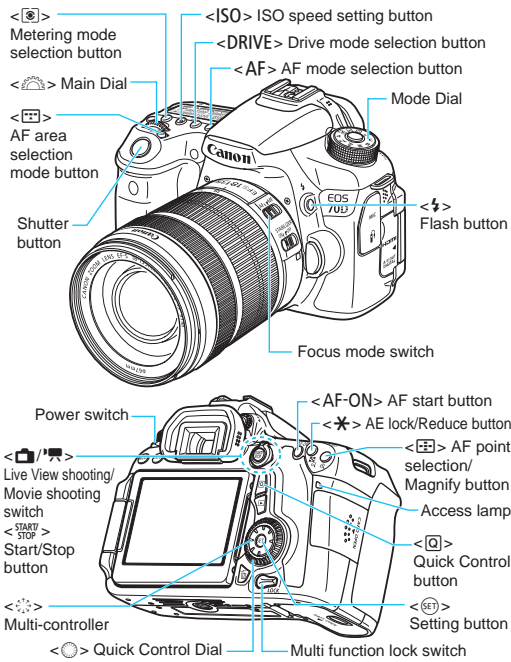

LCD Panel

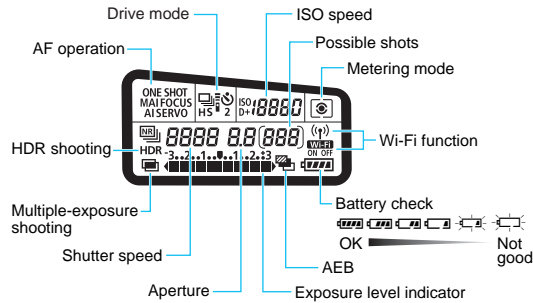

Viewfinder Information

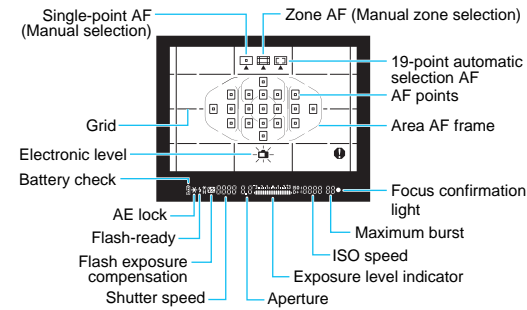

Basic Zone Modes



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Scene Intelligent Auto
- Flash Off
- Creative Auto
- SCN Special scene
 - Portrait
 - Landscape
 - Close-up
 - Sports
- Night Portrait
- Handheld Night Scene
- HDR Backlight Control

Using the Built-in Flash


Basic Zone Modes

If necessary, the built-in flash will be fired automatically in low-light or backlit conditions (except in the <P> <Tv> <Av> <M> modes).

Creative Zone Modes

- Press the <Flash> button to raise the built-in flash, then shoot.

Creative Zone Modes

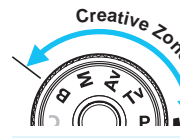


You can change the camera settings as desired to shoot in various ways.
* Set the <LOCK> switch downward (Multi function lock released).

P: Program AE


- Set the Mode Dial to <P>.
- When you focus a subject, camera automatically sets the shutter speed and aperture.

Tv: Shutter-priority AE

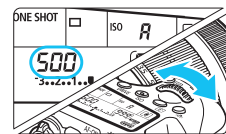


- Set the Mode Dial to <Tv>.
- Turn the <Shutter> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <Aperture> dial until it stops blinking.

Av: Aperture-priority AE

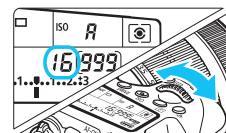


- Set the Mode Dial to <Av>.
- Turn the <Aperture> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <Shutter> dial until it stops blinking.

ISO: ISO Speed

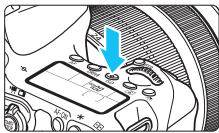


- Press the <ISO> button, turn the <Shutter> or <Aperture> dial.
- ISO 100 to ISO 12800 can be set in 1/3-stop increments.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

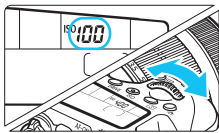


Drive Mode




- Press the <DRIVE> button, turn the <Shutter> or <Aperture> dial.
- Single shooting
- High-speed continuous shooting
- Low-speed continuous shooting
- Silent single shooting
- Silent continuous shooting
- 10-sec. self-timer/remote control
- 2-sec. self-timer/remote control

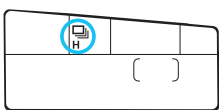

AF: AF Operation

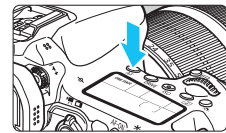


- Set the lens focus mode switch to <AF>.
- Press the <AF> button, then turn the <Shutter> or <Aperture> dial.

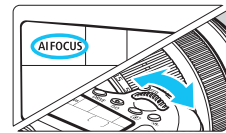


- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF operation automatically
- AI SERVO (AI Servo AF):** For moving subjects


AF Point Selection

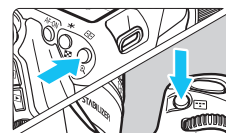

- Press the <AF Point> or <AF Area> button.
- The AF point selection will change in the direction you tilt the <AF Point>. If you press <Set> straight down, the center AF point (or center zone) will be selected.
- You can also select a horizontal AF point by turning the <Aperture> dial and select a vertical AF point by turning the <Shutter> dial.

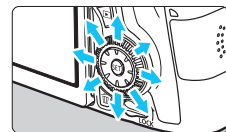


AF Area Selection Mode

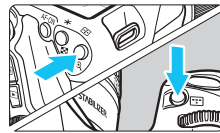


- Press the <AF Area> or <AF Point> button.
- Look through the viewfinder and press the <AF Area> button.
- Each time you press the <AF Area> button, the AF area selection mode changes.

Live View Shooting

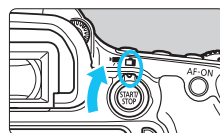

- Set the switch to <Live View>.
- Press the <Start/Stop> button and the image will appear on the LCD monitor.

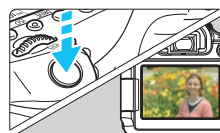


- Press the shutter button halfway to focus, then press it completely to take the picture.
- Press the <Start/Stop> button to stop the Live View shooting.


Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 230 shots	Approx. 210 shots


Shooting Movies

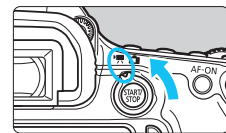

- Set the switch to <Movie>.
- The image will appear on the LCD monitor.

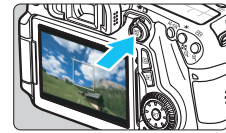

- Press the <Start/Stop> button to start shooting a movie. To stop movie shooting, press the <Start/Stop> button again.
- To shoot still photos, press the shutter button completely.

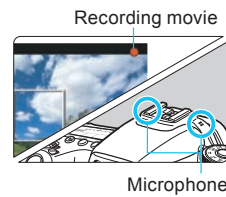

- When the shooting mode is <M>, you can shoot movies with manual exposure.
- You can set movie shooting settings with the menu options under the [1] or [2] tab.